


Blind Corner Units

KITCHENKIT


TRADE KITCHENS MADE EASY

Corner parts panels and components


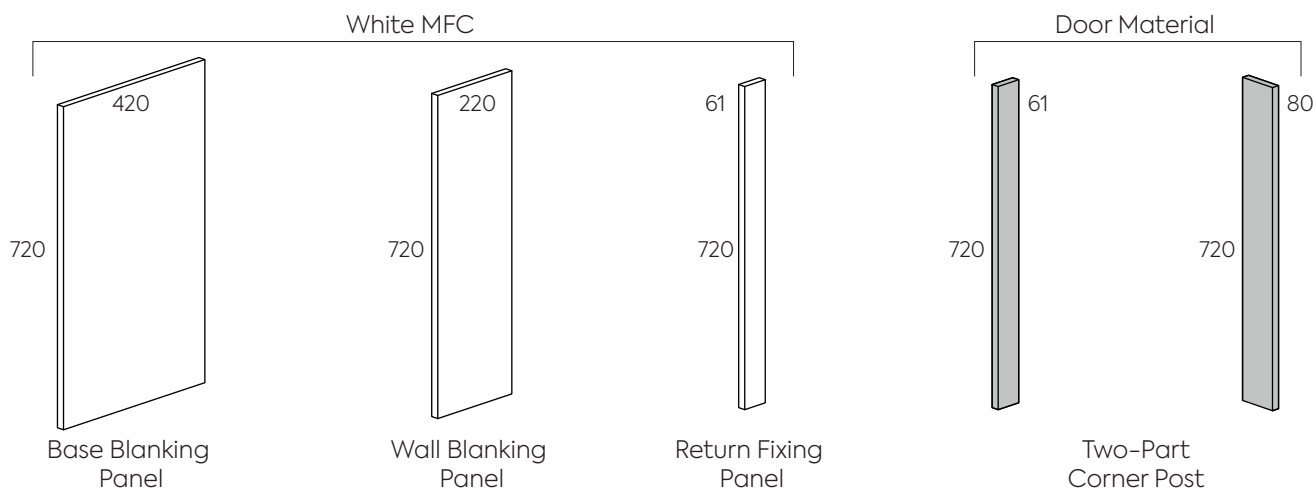


Standard Wall Unit Installation

600 Wall Unit

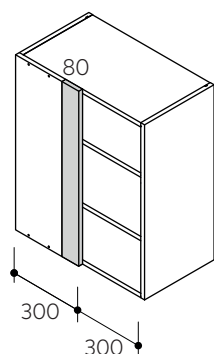


The centre mullion is pre-drilled for various hinge plates.
Emuca - 18mm
Hettich - 32mm

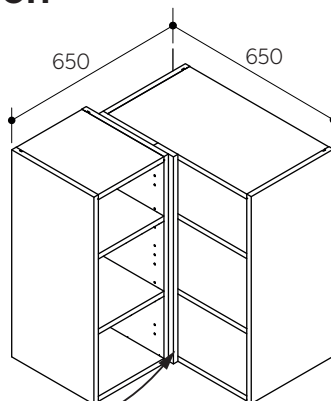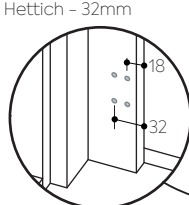

The rear face of the panel is pre-drilled for hinge mounting plates which must be fitted before fitting the panel. Take note of the relevant hinge manufacturers drilling.
Butt the 80mm panel against the wall blanking panel to leave a 300mm aperture. (Discard both 61mm panels)
Use chipboard screws(not supplied) directly into the cabinet top/bottom/end panels.

The return unit is fitted as shown - this creates a 19 x 19mm reveal of the corner panel, once the doors are fitted this becomes a 3-4mm clearance gap.


For large door handles or full-width door trims where additional clearance maybe needed - see the flexible installation overleaf

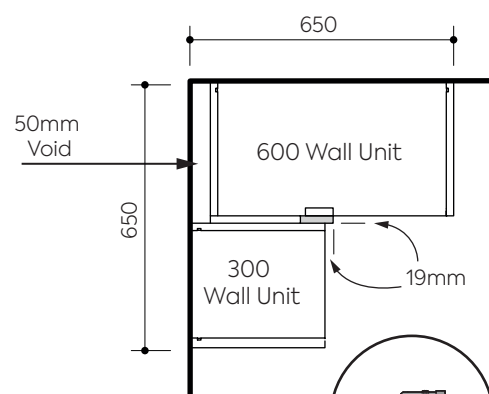


Corner hinge is mounted on rear of centre upright

Standard Base Unit Installation

1000 Base Unit

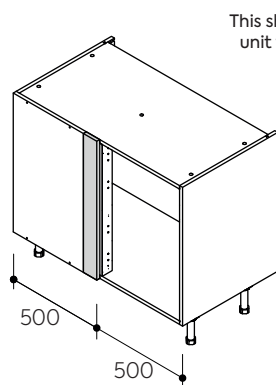

This shows a 1000mm base unit with 500 door, other permutations are possible

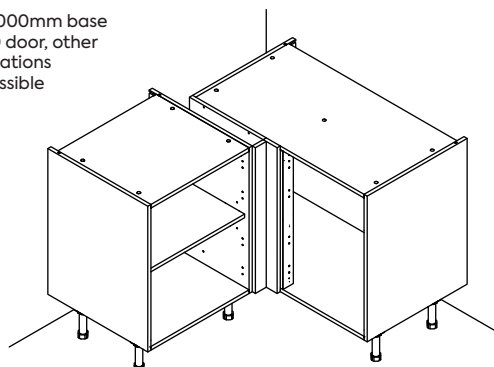

Both parts of the corner post are fitted together using chipboard screws (not supplied) to form an 80 x 80mm right angled assembly.

This is then butted up to the blanking panel creating a 500mm door aperture.

Form the return unit as shown, use the 61mm return fixing panel behind the corner post. This allows the return base unit to be fixed into position using chipboard screws (not supplied)

Standard hinge is mounted on centre upright