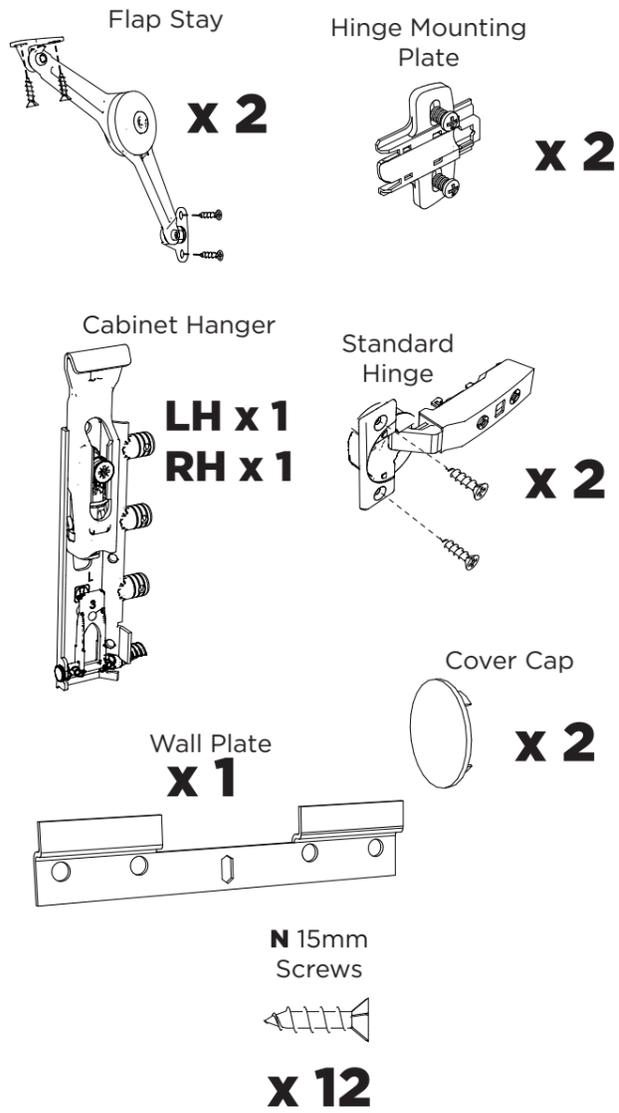
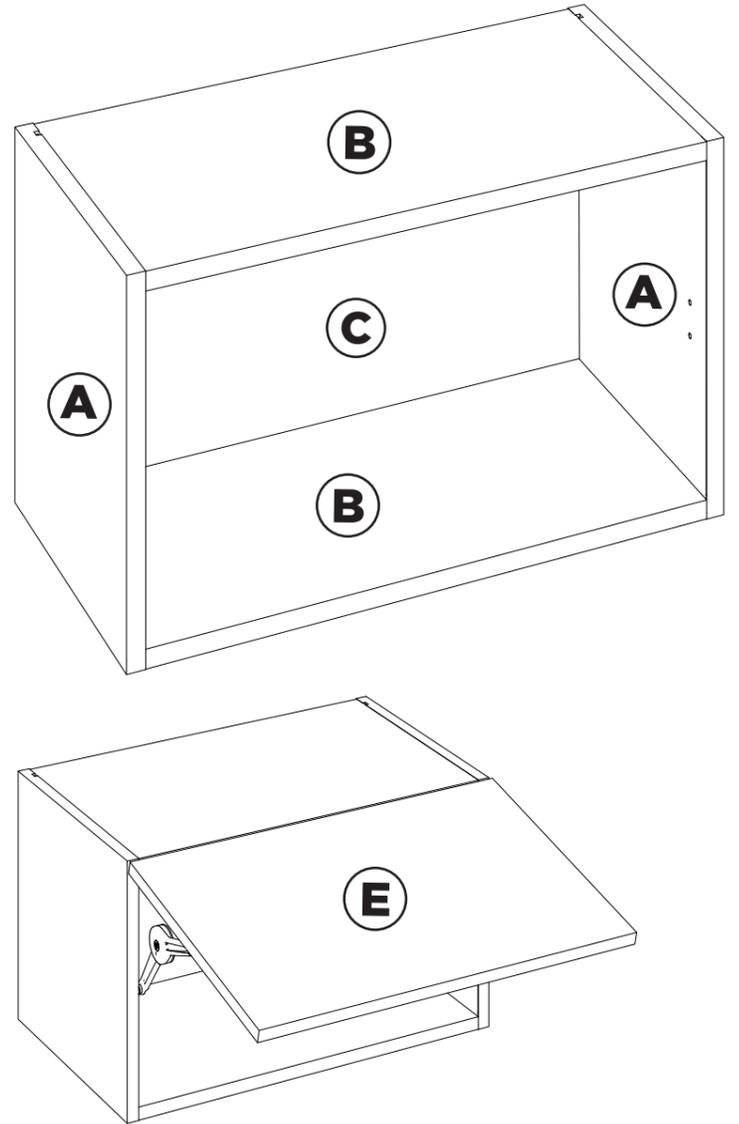


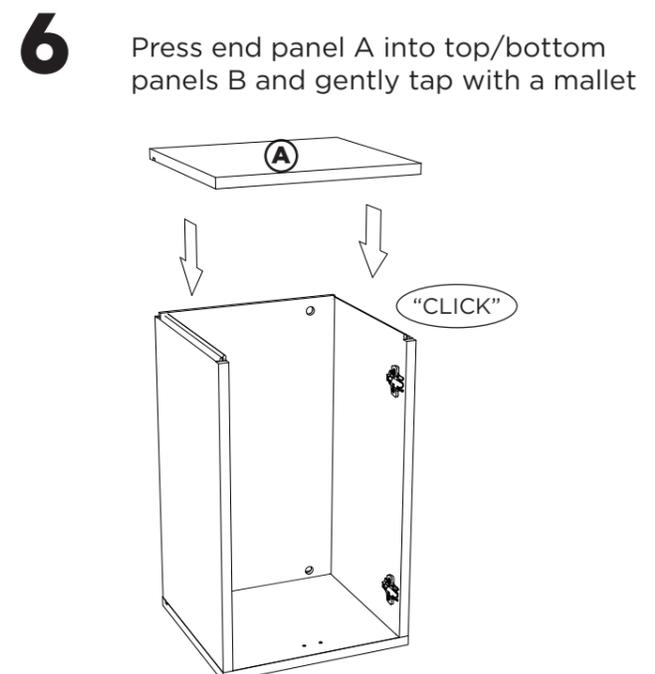
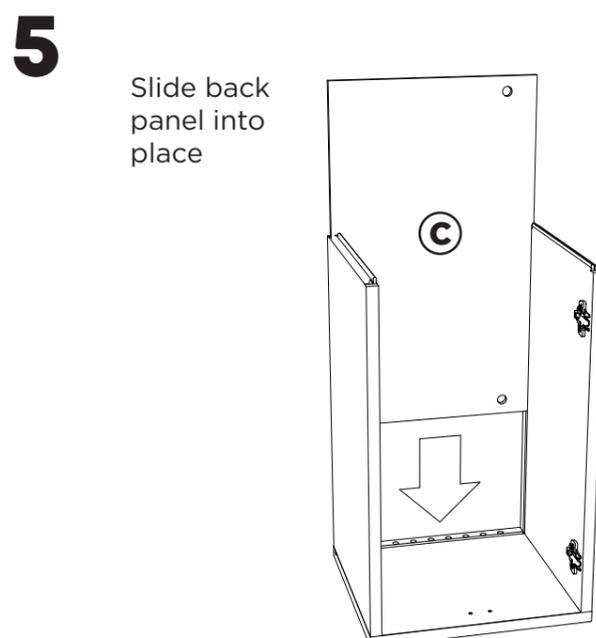
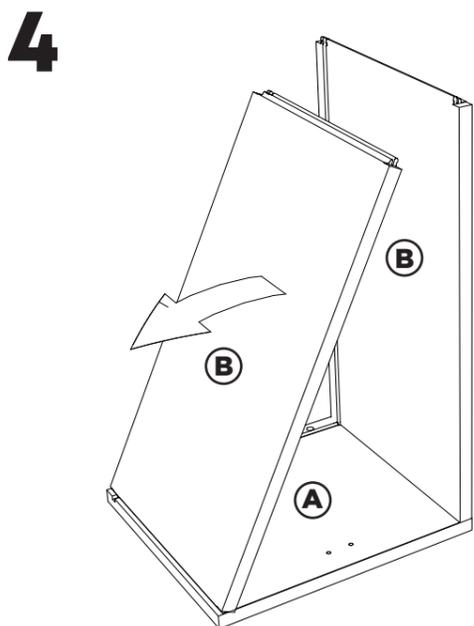
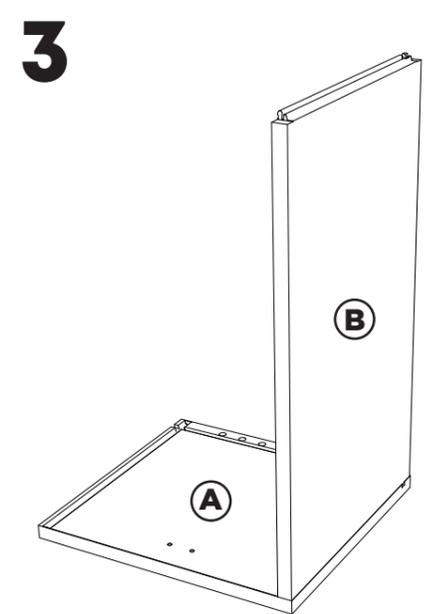
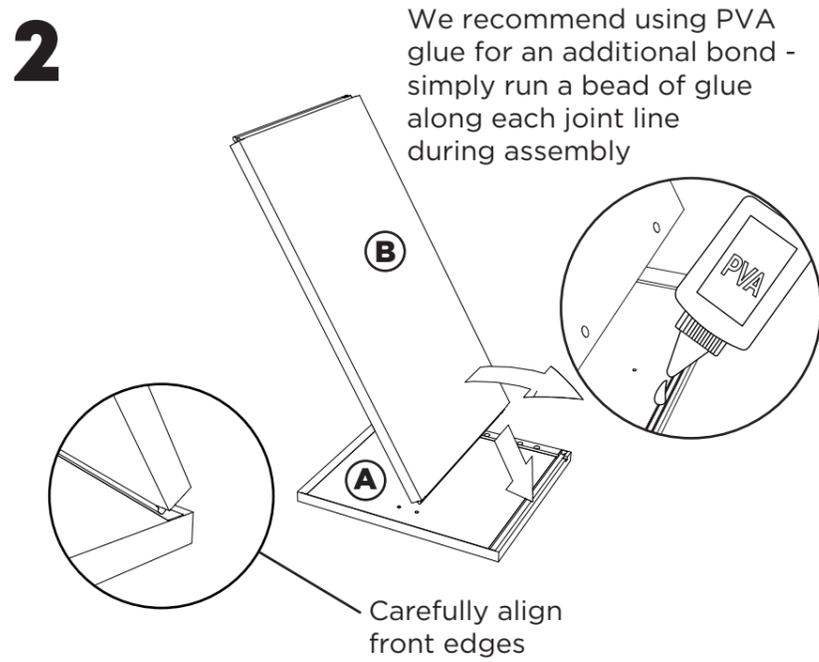
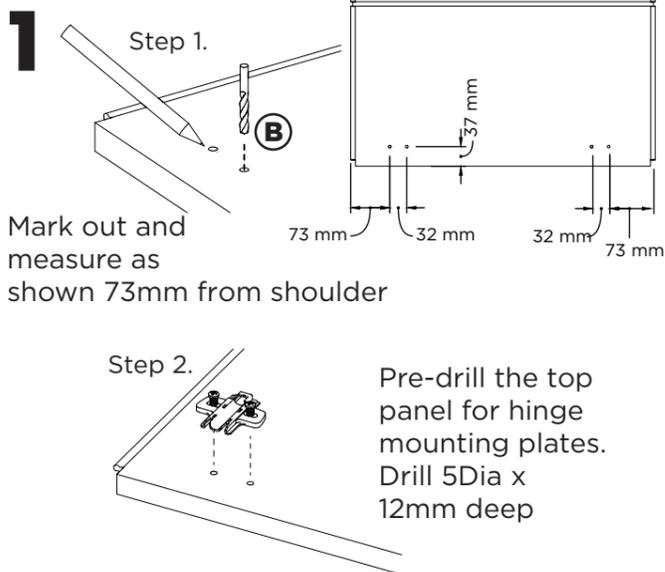
Fittings



- (A)** Wall End Panel
- (B)** Top/Bottom Panel
- (C)** Back Panel
- (E)** Door

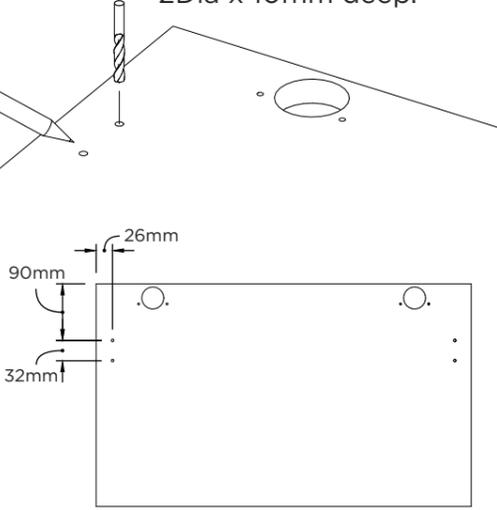


Assembly

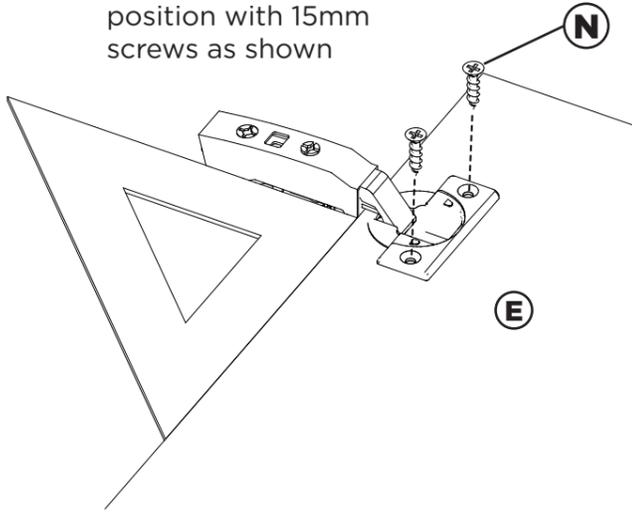


7

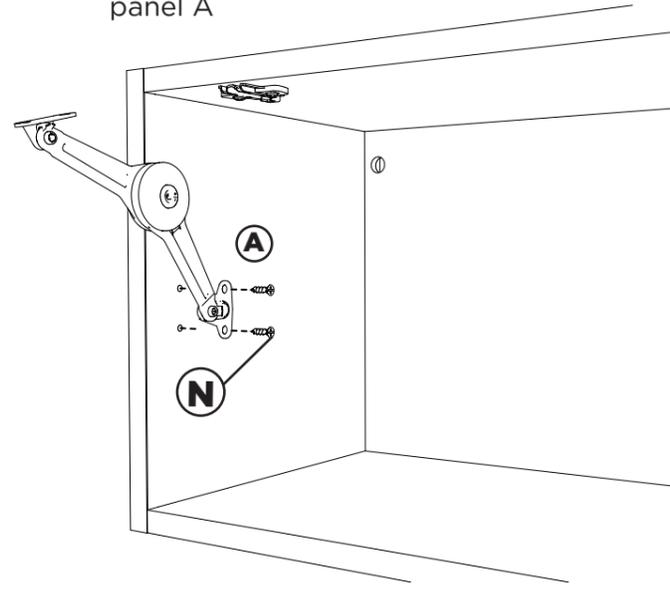
Mark out and measure for flap stay fitting. Drill 2Dia x 10mm deep.

**8**

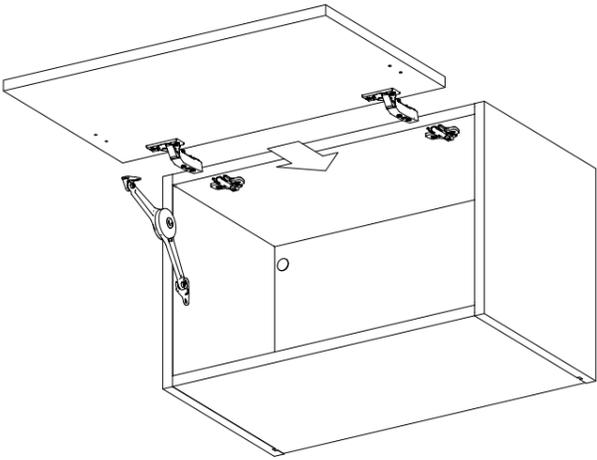
Ensure the hinge arm is at 90 degrees to the door before fixing in position with 15mm screws as shown

**9**

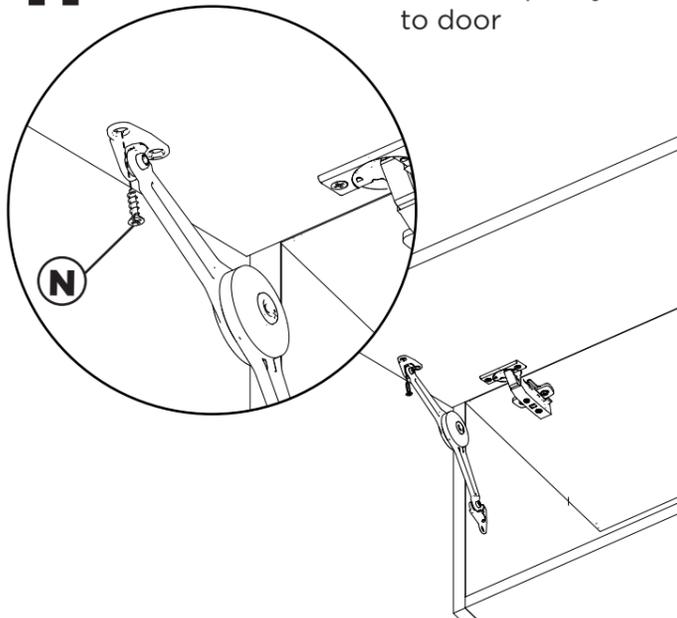
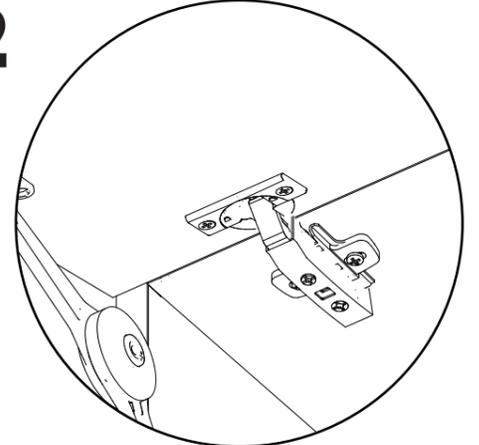
Screw flap stay to panel A

**10**

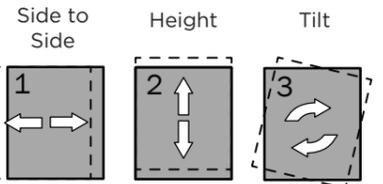
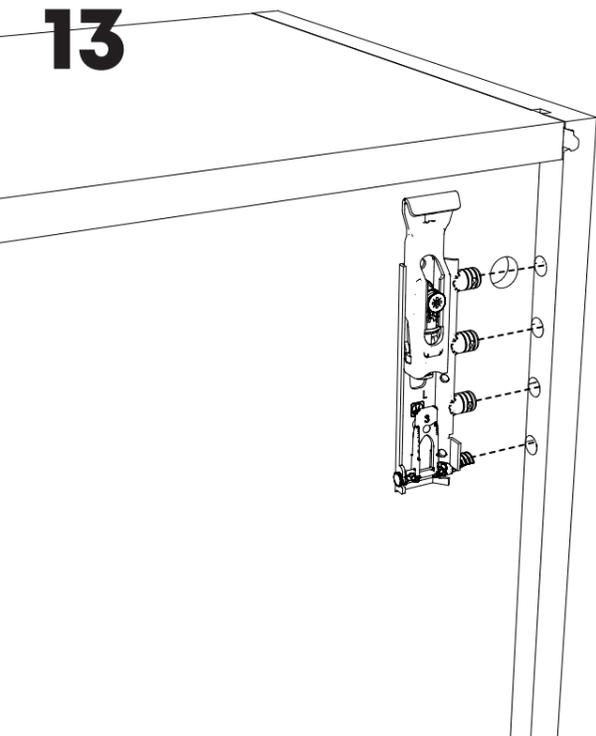
Insert hinges into mounting plates

**11**

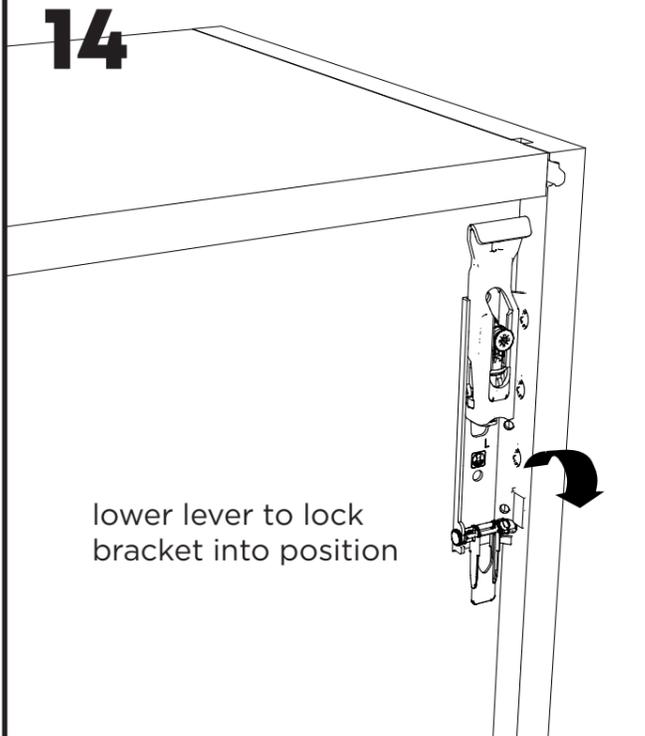
Screw flap stay to door

**12**

Hinge adjustment

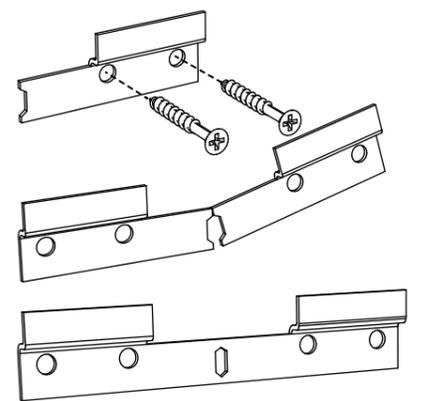
**13****14**

lower lever to lock bracket into position

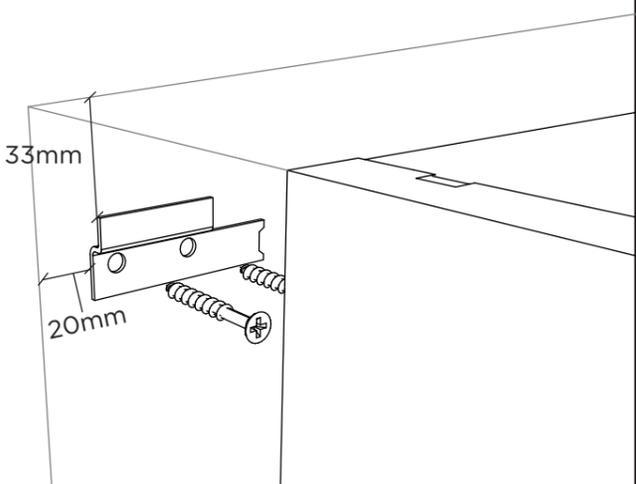
**15**

Attach to wall using appropriate fittings

Please note, wall fixing screws are not supplied - these should be to suit your type of wall/house build. If in doubt please ask a professional for advice.

**16**

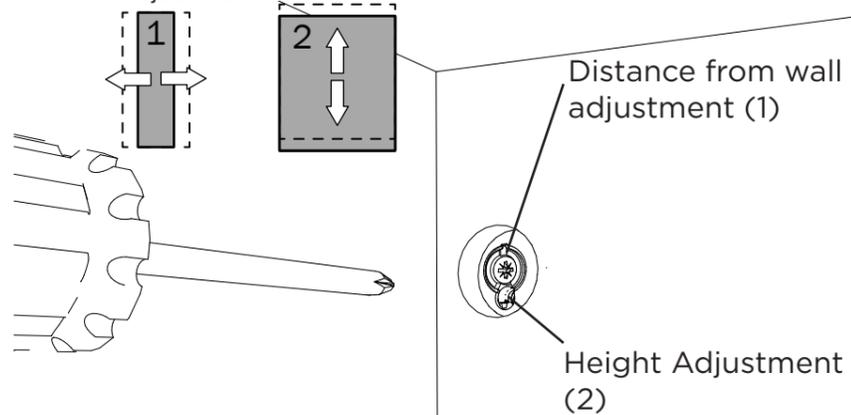
Wall plate position

**17**

Distance From Wall Adjustment

Height

To Adjust Cabinet Position
Adjust lower screw first

**18**

Fit cover cap

