



Parts

Left Hand Bracket


Right Hand Bracket

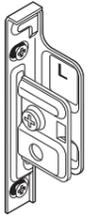

x1
x3

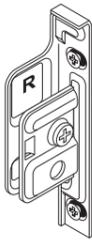

x1
x3

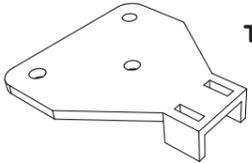

T Softclose Arm
x6



Euro screws

x12

R 16mm



x12


S 10mm



N 15mm Screws

x54


- D** RH Drawer runner x 3
- E** LH Drawer runner x 3
- F** RH Drawer side x 3
- G** LH Drawer side x 3
- H** Drawer back x 3
- I** Drawer base x 3
- J** Softclose Housing x 6

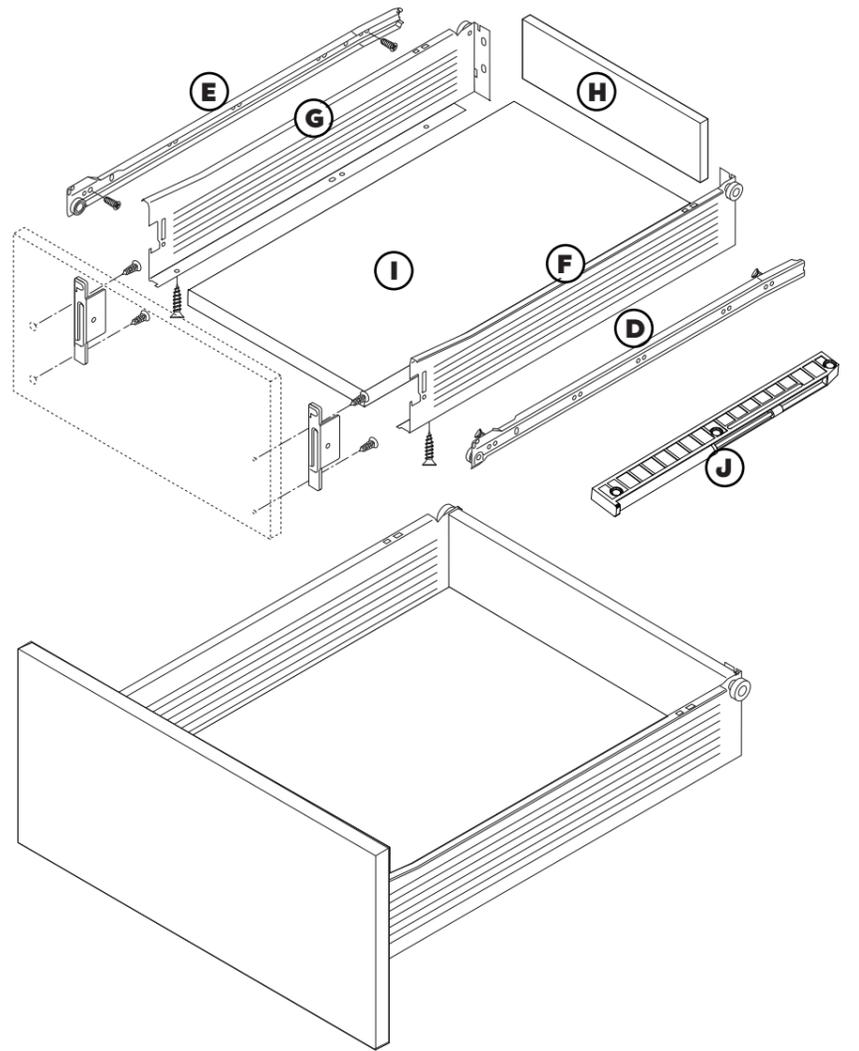

Assembly

1


Stand base panel upright to mark and fit drawer sides using 15mm screws

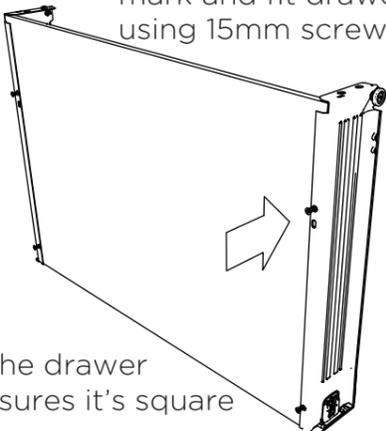


Standing the drawer upright ensures it's square

2


Lie the drawer down to mark and fit the backpanel using 15mm screws

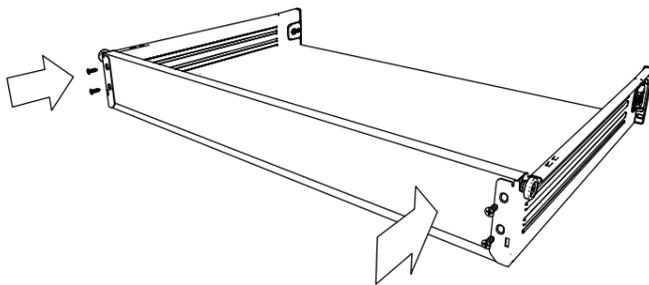


3

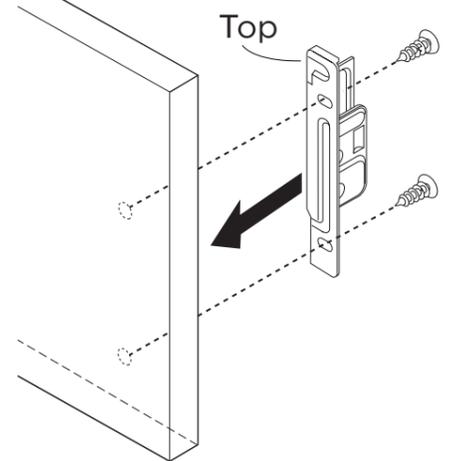

4

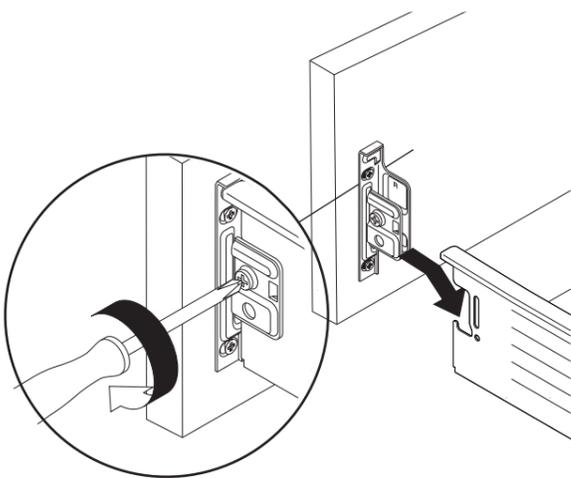


5

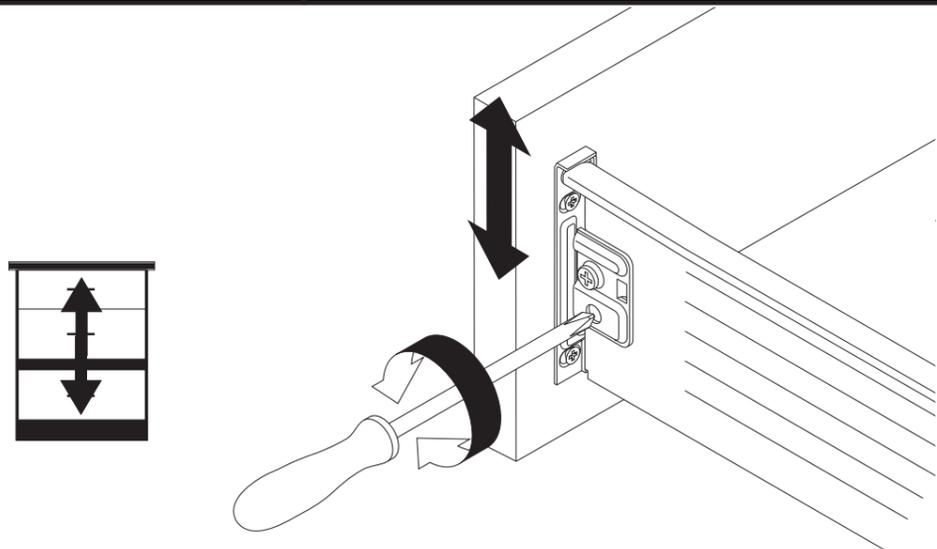


6

Loosen left and right-hand side to adjust

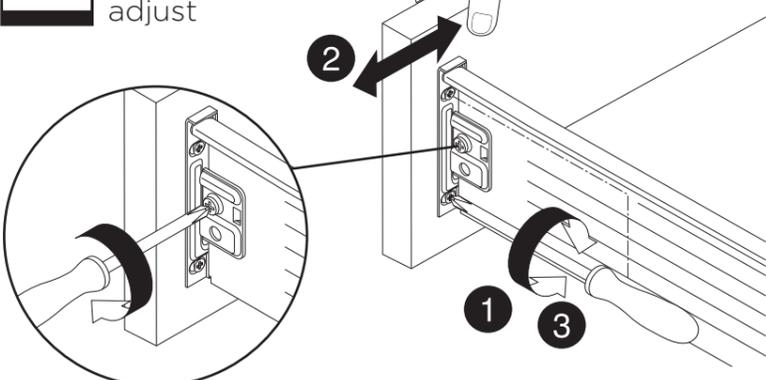

7

Use remaining hole on metal runner to locate and fit softclose arm, use 15mm screws

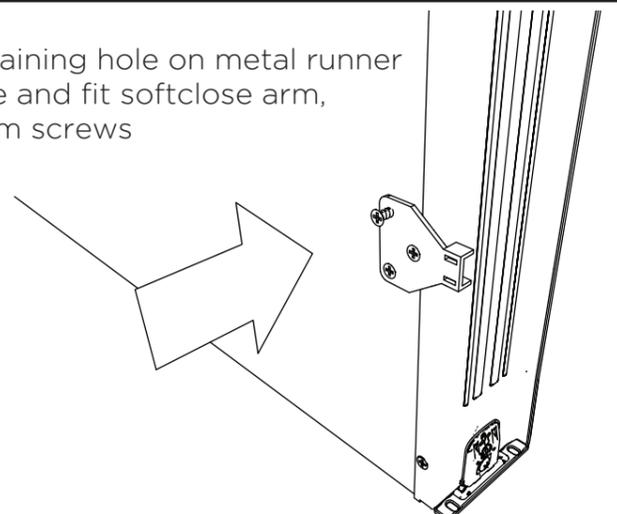

8

Position runners and softclose as shown

using:

14mm euroscrews for runners

20mm euroscrews for softclose housing

